


Parts List for Standard Construction Pumps

Fig. 4508

ITEM NO.	NAME OF PART
1	MOTOR
2	ADAPTER PLATE (NOT SHOWN)
3	CAP SCREWS
4	FLAT HEAD CAP SCREWS (ITEM 2)
5	COUPLING
6	CASING
7	IMPELLER
8	SUCTION HEAD
9	STRAINER
10	SUPPORT HEAD
11	BOTTOM SHAFT BEARING
12	CHOKER RING
13	WOODRUFF KEY
14	IMPELLER WASHER
15	IMPELLER HUG NUT
16	STUDS
17	NUTS
18	STUDS (SIZE 1-2)
19	NUTS (ITEM 18)
20	STUDS (ITEM 6-8)
21	NUTS (ITEM 20)
22	STUDS (SIZE 3-4-5)
23	NUTS (ITEM 22)
24	SUCTION HEAD GASKET
25	NIPPLE
26	REDUCING ELBOW
27	PIPE PLUGS
28	SHAFT
29	COLUMN PIPE
30	DISCHARGE PIPE
31	GREASE PIPE
32	COLUMN PIPE (BOTTOM SECTION)
33	PIPE COUPLING
34	INTERMEDIATE BEARING HOUSING
35	GRAPHALLOY BEARING
36	MOTOR MOUNTING
37	SHAFT ADJUSTING NUT
38	LOCKWASHER
39	THRUST BEARING
40	GREASE SEAL
41	SHAFT KEY
42	NIPPLE
43	ELBOW
44	PIPE NUTS
45	WASHERS
46	REDUCER COUPLING
47	GREASE FITTING
48	SHIMS (WHEN REQUIRED)
49	GREASE CUP
50	FLOAT SWITCH
51	FLOAT
52	FLOAT ROD
53	FLOAT ROD COLLAR
54	SET SCREWS (HEADLESS)
55	FLOAT ROD GUIDE
56	SWITCH BRACKET
57	SWITCH MOUNTING PLATE
58	MACHINE SCREW & NUT
59	MACHINE SCREWS
60	MACHINE SCREWS
61	COUNTER WEIGHT (NOT SHOWN)
62	EYE BOLT & NUT (NOT SHOWN)

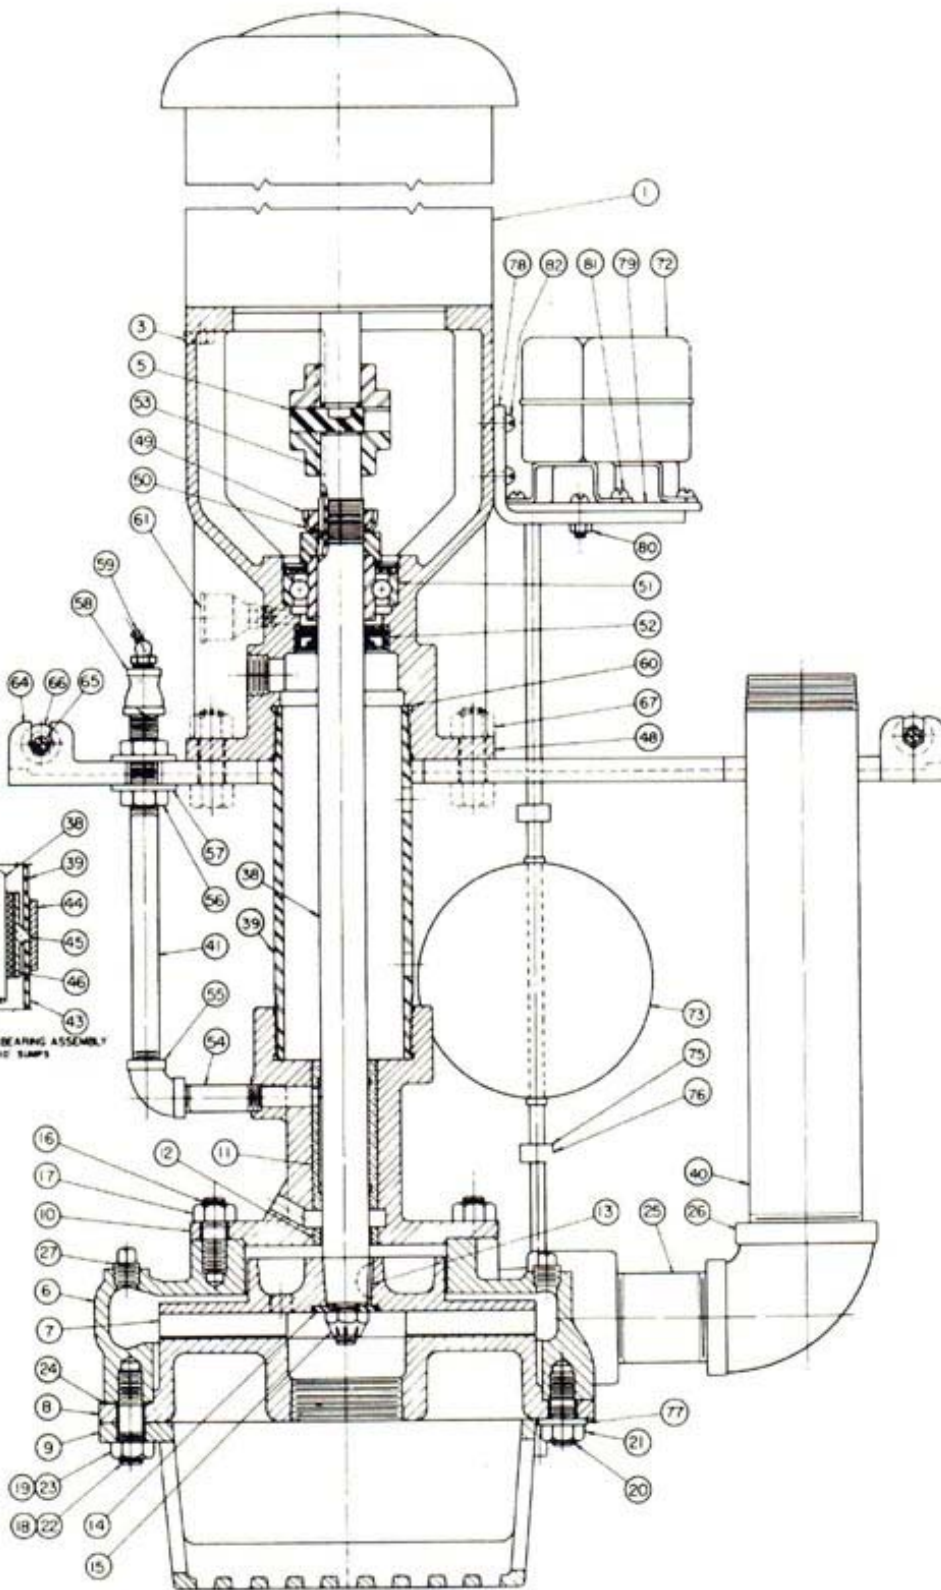

INTERMEDIATE BEARING ASSEMBLY FOR 7, 8, 9, 10 PUMPS